

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE:

When using an electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Use this appliance only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury.
2. This product is intended for household use ONLY and not for commercial industrial or outdoor use.
3. To protect against electric shock, do not immerse unit, plug or cord in water or spray with liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug the appliance from the outlet when not in use & when moving from one location to another and before cleaning.
6. To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull by the cord.
7. Do not operate the appliance in the presence of explosive and/or flammable fumes.
8. Do not place the appliance or any of its parts near an open flame, cooking or other heating appliance.
9. Do not operate the appliance with a damaged cord or plug, if the product malfunctions, or if it is dropped or damaged in any manner.
10. The use of attachments not recommended by the manufacturer may be hazardous.
11. Place the unit on a dry level surface.
12. Do not operate if the housing is removed or damaged.
13. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
14. This appliance is designed to be free standing only, and should not be recessed or built-in (fully recessed).
15. Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight will affect / alter the outside color of the appliance.

WARNING: To reduce the risk of fire, electric shock or personal injury, unplug or disconnect the appliance from the power supply before servicing.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

Save time and money. Before you call for service, check the Troubleshooting Guide at the back of this manual. It lists causes of minor operating problems that you can correct yourself.

Unpacking the unit:

1. Remove the exterior and interior packing.
2. Check to be sure you have all the following parts:
 - a. One (1) wine cellar
 - b. One (1) instruction manual
 - c. Three (3) racks

Finding a good spot for your wine cellar:

- Place your wine cellar on a flat surface that is strong enough to support it when fully loaded.
- Allow 15 cm (5") of space on the right side of the wine cellar to allow proper ventilation.
- This wine cellar is designed to be free standing only, and should not be recessed or built-in (fully recessed).
- Do not place heavy objects on top of the unit.
- Do not locate the unit in a moist place.
- Do not locate the wine cellar in direct sunlight.
- The unit's cooling system operates efficiently with an ambient temperature of 21°C (70°F) or less.


ALWAYS REMOVE ALL BOTTLES BEFORE MOVING THE WINE CELLAR

Installation instructions:

1. Gently place/slide the racks in the wine cellar. Note that two of the racks are designed to accommodate the circulating fan.
2. First plug one end of the power cord into the receptacle in the back of the cellar.
3. Then plug the other end into an exclusive standard 110/120V outlet.

Bottle loading procedure:

Please follow this bottle loading procedure to maximize the unit's efficiency.

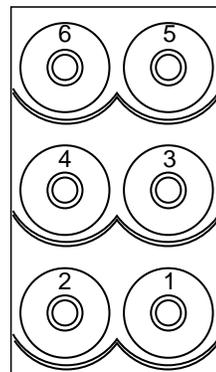

SETUP CHECKLIST

- Unit must be placed on a flat surface.
- The room's ambient temperature should be 21°C (70°F) or cooler for unit to function properly.
- There should be 15cm (5") of clear space on the right-hand side of the unit.
- Unit should not be placed in direct sunlight.
- Do not place unit next to a major appliance that emits large amounts of heat, such as a dishwasher, microwave, toaster oven, oven, barbecue, etc.
- Do not plug unit into the same outlet as a refrigerator.
- Unit should not be built-in into a wall recess, cabinet, niche or any type of enclosed area
- Determine the best setting using the preset guide found in this manual (page 5) or printed on the inside door panel.
- Place bottles inside the cellar according to the bottle loading diagram found on page 2.

Cleaning instructions:

Below is a listing of general cleaning tips that should be taken when cleaning your wine cellar.

When cleaning your cellar, be cautious when using any type of cleaning products, some individuals may have allergic reactions to the chemicals in some of these products. By using solvents to clean your cellar, you may damage its finish, hence it is recommended to use mild detergents, baking soda and water. Never spray or squirt any type of liquid onto your cellar. If a spray is needed, spray the liquid onto a cloth and then use the moistened cloth to rub down the cellar.

- Always unplug the wine cellar before cleaning.
- Wash the inside surface with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart (~1 litre) of water.
- Wash the racks with a mild detergent solution.
- The outside of the wine cellar should be cleaned with a mild detergent solution.
- Use a damp cloth or sponge to clean the control panel.
- Always dry all the parts with a clean dry cloth before plugging the wine cellar back into the receptacle.

Cleaning Stainless Steel Door Accents:

To remove fingerprints from the door accents

- use a soft cloth or sponge soaked in soapy water
- or a slightly damp microfiber cloth

For more stubborn dirt a normal cream cleanser will generally do the job. If cream cleanser is not enough, treat the dirt with a 25% vinegar solution and give it some time to dissolve. Then clean, rinse and wipe dry as usual. Lastly, when cleaning the stainless steel, remember to wipe along the polish lines and not across them.

AVOID ABRASIVE PRODUCTS SUCH AS SCOURING PADS AND POWDERS. THEY WILL PERMANENTLY DAMAGE THE FINISH OF YOUR WINE CELLAR

In addition to the cleaning tips listed above it is recommended to clean the external fan of your wine cellar every 6 months as dirt, dust and hair can build up causing the cooling system to not function as efficiently.

ALWAYS UNPLUG THE UNIT FROM THE WALL PRIOR TO CLEANING THE FANS

There are 2 effective methods to clean the external fan of your wine cellar:

- A vacuum cleaner can be used collect the dirt, dust and hair that has built up
- Alternatively compressed air in a can be used to clean the fan of your wine cellar. Ensure to follow the directions of the compressed air container to avoid damage or personal injury.

Setting the thermostat to Celsius or Fahrenheit:

At anytime, you can manually change the temperature setting from °C to °F and vice-versa. Simply press the (°C/°F) to switch back and forth. LED indicators show the mode selected.

Setting the temperature control (manually):

At anytime, you can manually adjust the temperature. Simply press the (-) button on the control panel to lower the temperature and the (+) to increase the temperature inside the wine cellar.

Important Note:

The built-in microprocessor will not allow the user to set the temperature above 20°C (68°F) or below 7°C (45°F) because wine should not be stored outside this temperature. Please note that the protection mechanism only works when used under the recommended ambient temperature conditions described in this manual.

Setting the temperature control (presets):

To change the preset temperature in the wine cellar, simply press the (Preset) button until the desired preset number (1 to 8) appears.

You will find this chart conveniently printed on the inside of the door panel.

TEMPERATURE GUIDE		
Preset	To Store	To Serve
1	Red Wine Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Light Red White Wine
2	Red Wine Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	White Wine
3	Red Wine Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Light Red White Wine
4	Red Wine Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Red Wine Light Red
5	Red Wine Light Red White Wine Fruit/Dessert Wine	Red Wine
6	Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	White Wine
7	Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Champagne & Sparkling
8	Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Champagne & Sparkling Fruit/Desert Wine

TEMPERATURE GUIDE		
Preset	To Store	To Serve
1	Red Wine Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Light Red White Wine
2	Red Wine Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	White Wine
3	Red Wine Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Light Red White Wine
4	Red Wine Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Red Wine Light Red
5	Red Wine Light Red White Wine Fruit/Dessert Wine	Red Wine
6	Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	White Wine
7	Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Champagne & Sparkling
8	Light Red White Wine Fruit/Dessert Wine Champagne/Sparkling	Champagne & Sparkling Fruit/Desert Wine

How to replace the inside light bulb?


WARNING, ONLY REPLACE THE INSIDE LAMP WITH A 12V:5W BULB OF THE SAME SHAPE AND SIZE

1. Unplug the unit from the wall.
2. Using a #2 Phillips screw driver, remove the 2 screws that secure the lens for the interior light to expose the light bulb.
3. Remove the old light bulb by turning counter clock wise.
4. Insert and lightly tighten the new light bulb.
5. Replace the lens and screws.

Instructions for fuse replacement:

Adhere to the following instructions to replace the fuse if needed.
USE ONLY A 2.5A FUSE.

1. Unplug the unit from the wall.
2. Using a flat head screwdriver, remove the fuse holder as shown below.
3. Remove the old fuse from the holder.
4. Replace with a new fuse.
5. Carefully return the fuse holder into the socket.

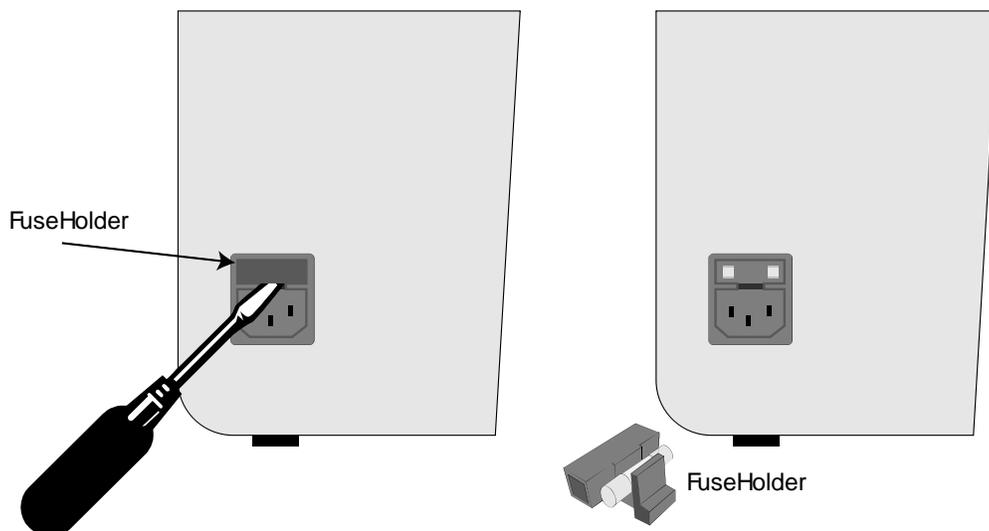

Troubleshooting:

You can easily solve many common problems by trying the suggestions below:

SYMPTOM	POSSIBLE CAUSE
Vibrations	<ul style="list-style-type: none">• Check to make sure the wine cellar is on a level surface
The door will not close properly	<ul style="list-style-type: none">• The wine cellar is not on a level surface• The racks are out of position
Fan is always running.	<ul style="list-style-type: none">• This is simply a function of the cooling system. The lower the setting, the more the fan will run. If the room is warmer than 21°C (70°F), it will run more.• The unit has been designed to run continuously when operating at the lower temperatures.• The unit uses about as less energy than a 100-watt light bulb.
Unit has no power.	<ul style="list-style-type: none">• Check the wall outlet for power. Make sure the outlet is not controlled by a wall switch.
The inside temperature does not seem correct	<ul style="list-style-type: none">• Make sure the cooling vents on the right side of the cellar are not obstructed. Have at least 15cm (5") of space on right side of unit.• The unit will have difficulty in cooling if the set temperature is 13°C (23°F) below the ambient temperature. Example: if the ambient temperature is 30°C (86°F), the unit will have difficulty cooling to 17°C (63°F).• When using the unit for the first time, it can take up to 24 hrs to reach the desired temperature.
	Continued next page...

SYMPTOM	POSSIBLE CAUSE
The unit does not operate	<ul style="list-style-type: none"> • It may not be plugged into the wall socket • Make sure the wall socket is functional by testing another electrical appliance in the power socket • Make sure the circuit breaker is not tripped or a fuse is blown. • The unit's fuse could be blown and would need to be replaced. See page 6 for instructions on how to change the fuse.
The unit will not cool. Power is On.	<p>Make sure there are at least 3-5 bottles in the unit. Allow at least 24 hours for the internal temperature to adjust properly.</p> <p>What is the temperature of the room? If the room temperature is above 24°C (75°F), the unit will not get below 11° (52°F). Humidity does not affect the cooling ability of the unit.</p> <p>To achieve accurate temperature control, the unit should not be used or operated in any of the following locations:</p> <ul style="list-style-type: none"> • in a sunny place • in a room with poor air circulation such as a garage • near another heat producing appliance (dishwasher, oven, refrigerator). • with an outlet shared with a refrigerator as it will drain power from the unit. • built-in a wall recess, niche or cabinet. • in a cabinet or closet. <p>And remember to have at least 15 cm (5") of space on the right side of unit.</p>
General Statements	<ul style="list-style-type: none"> • The unit can be manually set using the + and – symbols. The minimum setting is 7°C (45°F) and maximum is 20°C (68°F). • The unit does not use any CFC's. There is no compressor inside this unit. • The cooling system is called a Peltier System. • The unit uses about as much energy as a 100-watt light bulb.

SYLVANIA APPLIANCE WARRANTY

We appreciate your purchase of a SYLVANIA APPLIANCE. We take pride in the quality of our products and have manufactured your new APPLIANCE unit to exacting quality standards. We feel confident that in normal use, it will provide you with satisfactory performance. However, should you experience difficulty, you are protected under the provisions of this warranty.

SYLVANIA APPLIANCES are warranted against manufacturing defects in materials and workmanship in normal use for the following periods from the date of purchase by the original user, and is conditional upon the unit being installed and used as directed in the instruction manual.

WARRANTY PERIOD

WINE COOLERS - Electronic Carry-in Service : One (1) year Parts and Labour

WINE COOLERS - Compressor (under 5.0 cu.ft.)

Carry-in Service : One (1) year Parts and Labour

COMPRESSOR - Additional Four (4) years, Parts Only

SYLVANIA's obligation under this warranty should be limited to the repair, including all necessary parts and the labour connected therewith, or at our option the exchange of any APPLIANCE which shows evidence of a manufacturing defect within the warranty period. Replacement parts, furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

CUSTOMER OBLIGATIONS

This warranty applies to the product from the original date of purchase at retail. Therefore, the owner must provide a copy of the original, dated bill of sale. No warranty service will be performed without a bill of sale. Transportation to and from the service depot is the responsibility of the owner.

WARRANTY EXCLUSIONS

This warranty is extended to SYLVANIA APPLIANCES purchased and used in Canada. This warranty shall not apply to appearance or accessory items including but not limited to: cabinet, cabinet parts, knobs. This warranty shall, in addition, not apply to damages due to handling, transportation, unpacking, set-up, installation, customer adjustments that are covered in the instruction book, repair or replacement of parts supplied by other than the SYLVANIA authorized service depot, any malfunction or failure caused by or resulting from abnormal environmental conditions, improper unauthorized service, improper maintenance, modifications or repair by the consumer, abuse, misuse, neglect, accident, fire, flood, or other Acts of God, and incorrect line voltage. Under no circumstances shall SYLVANIA be liable for any special incidental, indirect or punitive damages or for any consequential damages, including spoilage of wine, even if Sylvania knows or is informed that such damages are possible. It is your responsibility to ensure your wine, and take all reasonable, necessary precautions, to safeguard its condition.

This Appliance product is only warranted to the original retail purchaser. This warranty becomes void in the event of commercial or rental use. This warranty becomes void in the event serial numbers are altered, defaced or removed.

SYLVANIA reserves the right to make changes in design or to make additions to or improvements upon this product without incurring any obligation to install the same on products previously manufactured.

The foregoing is in lieu of all other warranties expressed or implied and SYLVANIA neither assumes nor authorizes any person to assume for it any other obligation or liability in connection with the sale or service of this product. In no event shall SYLVANIA or its SYLVANIA dealers be liable for special or consequential damage arising from the use of this product, or for any delay in the performance of this warranty due to cause beyond our control.

The purchaser may have other rights under existing provincial or federal laws, and where any terms of this warranty are prohibited by such laws, they are deemed null and void, but the remainder of the warranty shall remain in effect.

HOW TO OBTAIN SERVICE

Should this product require service, you may obtain specific information on how to obtain service by contacting the SYLVANIA Dealer from whom this product was purchased, or by contacting us directly:

SONIGEM SERVICE

300 Alden Road
Markham, Ontario
L3R 4C1

PHONE: (905) 940-5089 FAX: (905) 940-2303

TOLL FREE: 1-800-287-4871